

2008 Class A Motorhome Maintenance Schedule

Special Operating Conditions ^{1/}

MILES (0000)	5	10	15	20	25	30	35	40	45	50	55	60
Kilometers (0000)	8	16	24	32	40	48	56	64	72	80	88	96
Change Engine Oil and Oil Filter Every 5,000 Miles/8,000 Kilometers OR Every 6 Months, Whichever Occurs First	■	■	■	■	■	■	■	■	■	■	■	■
Lube AND Inspect U-Joints, Steering & Suspension Every 5,000 Miles/ 8,000 Kilometers OR Every 6 Months, Whichever Occurs First ^{2/}	■	■	■	■	■	■	■	■	■	■	■	■
Perform Multi-point Inspection (Recommended)	■	■	■	■	■	■	■	■	■	■	■	■
Rotate Tires ^{3/}	■	■	■	■	■	■	■	■	■	■	■	■
Inspect Wheels for End-play and Noise	■	■	■	■	■	■	■	■	■	■	■	■
Inspect Cooling System and Hoses	■	■	■	■	■	■	■	■	■	■	■	■
Inspect Brake Pads, Rotors, Lines, Hoses, and Parking Brake System	■	■	■	■	■	■	■	■	■	■	■	■
Inspect Exhaust System and Heat Shields	■	■	■	■	■	■	■	■	■	■	■	■
Inspect Engine Air Filter	■	■	■	■	■	■	■	■	■	■	■	■
Replace Engine Air Filter	■	■	■	■	■	■	■	■	■	■	■	■
Inspect Transmission Fluid Level	■	■	■	■	■	■	■	■	■	■	■	■
Change Transmission Fluid & External Fluid Filter (if so equipped)	■	■	■	■	■	■	■	■	■	■	■	■
Replace Fuel Filter	■	■	■	■	■	■	■	■	■	■	■	■
Replace Wheel Bearing Grease and Grease Seals	■	■	■	■	■	■	■	■	■	■	■	■
Replace Spark Plugs	■	■	■	■	■	■	■	■	■	■	■	■
Inspect Drive Bolts	■	■	■	■	■	■	■	■	■	■	■	■
	Every 90,000 miles/144,000 Kilometers 90,000 miles/144,000 kilometers and every 30,000 miles/48,000 kilometers thereafter											
Change Engine Coolant	Every 6 years or 105,000 miles - whichever occurs first. After initial change, change coolant every 3 years or 45,000 miles - whichever occurs first											
Replace Wheel Bearings	Every 150,000 miles/240,000 kilometers											
Replace FFAD Bolts	Every 150,000 miles/240,000 kilometers if not replaced in the last 100,000 miles/ 160,000 kilometers											
Replace Brake Fluid	Every two years. Refer to label on master cylinder for fluid type											



^{1/} Refer to the Scheduled Maintenance Guide included with your vehicle. ^{2/}Owner Checks and Services[®], for other detailed maintenance information. Vehicles operated over 60,000 miles should adhere to the same 6-months/5,000 mile maintenance intervals.

^{2/} If equipped with Zork fittings.

^{3/} Vehicles with dual rear wheels should only rotate if unusual wear is noted.